DEEPER SMART SONAR PRO+ 2

ONE OF THE MOST POPULAR CASTABLE SONARS IN THE MARKET

ICE FISHING



A FISHING DEVICE THAT HAS BEEN AROUND FOR YEARS NOW AND HAS PROVEN TO BE ONE OF THE BEST CASTABLE SONARS OUT THERE. TESTED AND LOVED BY ANGLERS WORDLWIDE. NOW UPGRADED AND IMPROVED, AND BETTER THAN EVER - THE NEW DEEPER PRO+ 2.

WHY PRO+ 2?

Take the Deeper PRO+ 2 with you no matter the season or fishing type. This light and portable fishing gadget has an outstanding scanning range and scanning depth. Get accurate real-time data on your screen with the Fish Deeper™ app. Plan, log and analyse your fishing trips, and create your own bathymetric maps. Access your data on any device.



3 BEAM FREQUENCIES FOR ACCURACY

Cover large expanses and locate fish holding spots faster with the wide angle beam. Use the mid beam to drill in on that hotspot you've located. Home in on specific features and target species with the narrow angle beam.

OUSTANDING DEPTH AND CASTING RANGE

Scans down to 100 m / 330 ft with accuracy and precision. It generates its own Wi-Fi signal (no cellular data needed) to connect to your smart device, so cast out to 100 m / 330 ft and feel confident there will be rock solid connectivity.

EXCELLENT TARGET SEPARATION


With a target separation of 1 cm / 0.4" (narrow beam) and 2.4 cm / 1" (wide and mid beams), you'll be able to easily pinpoint target species and track even the tiniest lure when vertical jigging.

BUILT-IN GPS

Create lake maps from the shore, dock or bank. Just cast out and reel in to start mapping a water body. Your maps are automatically saved to Fish Deeper™ and accessible on any device.

deeper (170+2)



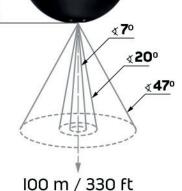



WHY DEEPER?

We are pioneers in castable, smart sonar technology. With our first smart sonar released in 2013, we have only moved onward and upward, constantly challenging ourselves to innovate more and do everything better. Our sonars are superior quality, designed and made in Europe, and with 24/7 customer care. Our anglers always come first.

TOTALLY VERSATILE. Various fishing modes for specific types of fishing. Use for boat/kayak, shore/bank and even ice fishing with its traditional flasher view. Fish in the summer or the winter, during the day or night. One sonar fits all.

EASILY PORTABLE. Wireless, small and lightweight. It's smaller than a tennis ball and weighs only 90 g (3.2 oz). Comfortably fits in a hatch, tackle pack and even your pocket.

BATHYMETRIC MAP CREATION. Create your own maps and access all your scans, maps, points of interests, photos and notes on the Fish Deeper™ app and web platform.

USER-FRIENDLY APP. See fish, vegetation, bottom structure, contour, hardness and consistency. Fish Deeper™ app includes water temperature and depth, various colour palettes for viewing, optional icons, sonar sensitivity adjustments and traditional ice flasher.

ONLY QUALITY. Made from highly durable ABS plastic with titanium inserts and a silicone gasket, it's not only water proof, but weather proof, handling temperatures as low as -20°C / -4°F.

WHAT'S NEW?

The same great product now upgraded and improved.

3 BEAM FREQUENCIES. Wide angle beam 47° (100 kHz), mid beam 20° (240kHz), and narrow beam 7° (675kHz). Better for ice and boat fishing.



LONGER LASTING FAST CHARGING BATTERY. Working time up to 9 hours. Charges to 80% in just 60 minutes and to 100% in 110 minutes.

BETTER SONAR READINGS. More crisp and clear visuals, making it easier to identify whatever you're after.

INCREASED SCANNING DEPTH. Scans down to 100 m / 330 ft.



FISH DEEPER

FISH DEEPER™ PREMIUM

Explore over 50 000 lakes with Fish Deeper™ Premium. Get a FREE 3-month subscription with your PRO+ 2.

maps.fishdeeper.com





PRODUCT TECH SPECS:

Material	ABS enclosure, Titanium inserts
Sonar Type	3 Frequency
Frequency (Beam cone)	Narrow 675 kHz (cone angle 7°) Medium 240 kHz (cone angle 20°) Wide 100 kHz (cone angle 47°)
Target separation	1 cm / 0.4 in Narrow beam 2.4 cm / 1 in Medium beam 2.4 cm / 1 in Wide beam
Min - Max depth	15 cm - 100 m / 6 in - 330 ft
Scanning rate	Up to 15 / second
Sonar modes	Standard, Boat, Ice fishing, Onshore GPS
Temperature sensor	Water surface temperature sensor in Celsius / Fahrenheit
Operating temperature	-20°C to 40°C / -4F to 104F
GNSS (Global positioning systems supported)	GPS, GLONASS, Galileo, BeiDou, QZSS
Operating time	Up to 9 hours
Charging technology	Fast charge 80% in 60 min. 100% in 110 min.
Internal battery	Li-lon, 3.7V Rechargeable, 950 mAh
Outlet adapter (not included)	Input 110V/220V. Output Micro USB, 5V 2A
Connectivity	Wi-Fi
Connectivity range	Stable connection up to 100 m / 330 ft
Colour	Black
Package content	PRO+ 2 Sonar USB wire Neoprene pouch Attachment bolts x2 Quick Guide Safety Regulations

PRODUCT LOGISTIC SPECS:

Model	DP5H10S10
EAN	4779032950701
Product size	65 mm / 2.55 in diameter
Product weight	90 g / 3.2 oz
Retail packaging size	150x135x73 mm / 5.9x5.32x2.87 in
Retail packaging weight	350 g / 12.4 oz
QTY per multipack	32
Multipack weight	12 kg / 26.5 lbs (theoretical)
Multipack size	32x55x32 cm / 12.6x21.7x12.6 in
Harmonized customs code	9014800000
Country of origin	Designed and made in Lithuania (EU)



